

Size Guide



CASEMENT WINDOWS

Minimum size square 350mm w x 350mm h
Maximum size side opening sash 700mm w x 1300mm h
Maximum size top opening sash 1300mm w x 1300mm h



TILT AND TURN WINDOWS

Minimum size 550mm w x 620mm h (sash opening sizes)
Maximum size 1500mm w x 1500mm h (sash opening sizes)




FRENCH DOOR

Maximum size 1000mm w x 2150mm h (sash size)
Minimum size 550mm w x 1900mm h (sash size)




MODLOCK BI FOLD DOOR

Minimum size 600mm w x 1850mm h (sash opening sizes)
Maximum size 1000mm w x 2150mm h (sash opening sizes)

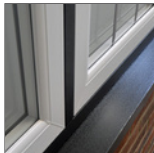

Timberlook

Minimum size square 350mm w x 350mm h
Maximum size side opening sash 700mm w x 1300mm h
Maximum size top opening sash 1300mm w x 1300mm h

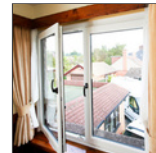


FRENCH CASEMENT WINDOWS

Minimum size square 350mm w x 350mm h
Maximum size side opening sash 700mm w x 1300mm h
Maximum size top opening sash 1300mm w x 1300mm h



RESI DOOR

Maximum size 1000mm w x 2150mm h (sash size)
Minimum size 700mm w x 1900mm h (sash size)

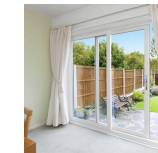

PATIO DOOR

Minimum size 1600mm w x 1900mm h
Maximum size 2950mm w x 2400mm h (x2 pane patio)



BI FOLD WINDOWS

Minimum size 600mm w x 1850mm h (sash opening sizes)
Maximum size 900mm w x 2150mm h (sash opening sizes)

01278 455326

windows@stormbuildingproducts.com
www.southgatewindows.com